



METHODS APPROVED FOR CABLE RUNS

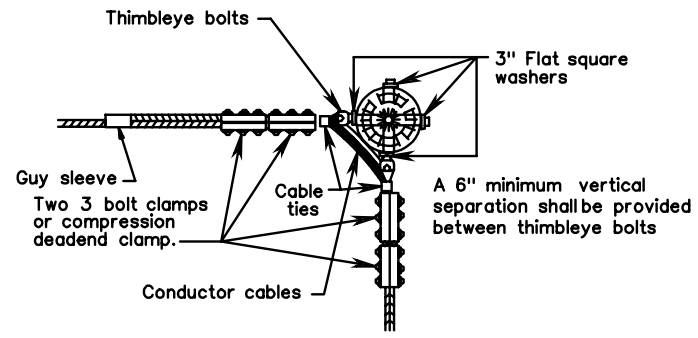

ANGLES LESS THAN 160°

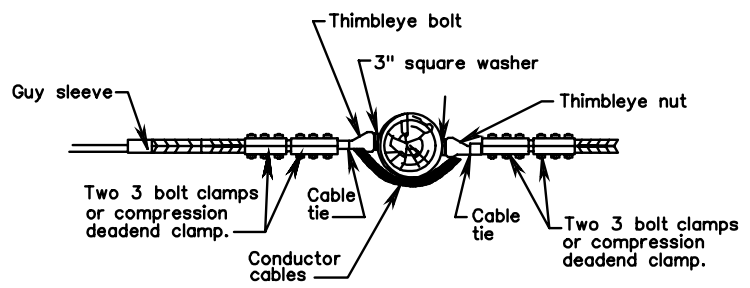

ANGLES GREATER THAN 160°

Note:
 * Concrete pad required when cabinet mounted on pole in earth areas. (See Standard CTE-1 for pad detail.)

WOOD POLE WIRING AND RIGGING DETAILS